

MECH 423 – Mechatronic Product Design – 2020W

Lab 1: Data Acquisition using C#

Objectives

The goal of this lab is to create a data acquisition program using C#. The program will interface with a microprocessor on the MSP430EXP Board. The microprocessor is continuously sampling data from a 3-axis accelerometer at a rate of 25 Hz on each axis, and then transmits this data to the PC via a USB-serial port. Learning objectives of this lab include the following:

- Learn to write event-driven programs using Visual C#
- Become self-sufficient in learning new commands in C#
- Write code to acquire data from a serial port
- Write code to buffer and parse incoming data stream
- Develop a user interface to display and storing incoming data
- Develop a state machine for recognizing gestures from accelerometer data
- Showoff your creativity using C#

Logistics and Evaluation


This lab is done individually. Students are expected to learn to program in C# and complete the lab activities on your own using their own computers. Students begin by searching for Visual Studio 2019 and download the installer for the free “Community” version. Run the installer and select only the “.NET Desktop Development” option. After installing, start learning about [Visual Studio](#), [programming in C#](#), and [Windows Forms](#) starting from the embedded links. Please follow these two video tutorial series: [C# 101](#) and [.NET Core 101](#). The video tutorials are for console programs rather than Windows Forms, but the materials are still highly relevant for this course. Additional tutorials can be found on MSDN, Google, or YouTube. Finally, there is the MECH 423 C# Tutorial (separate document available on Canvas) developed a few years ago. We have provided it as a reference. You do not need to hand-in the mini-projects for grades, but you can do them as extra practice.

After setting up Visual Studios and learning from the online tutorials, begin working on the exercises. Course staff and TAs will be available during your scheduled lab session for help. Exercises 1-7 are graded via video. After completing each exercise, upload a short (<15s) screen capture video of your program working. The TAs will give a 1/0 grade for completing the exercises on time. The due dates for completing the exercises will be discussed during lecture.

The main deliverable for this lab is a fully functional data acquisition program that acquires accelerometer data from the EXP Board, use this data to detect specific gestures, and then display/analyze/graph data in creative ways. This deliverable is evaluated in the form of a lab exam. An example lab exam is provided at the end of this document. The actual lab exam will be >90% the same with some minor changes. **Therefore, it is expected that you write the all your C# code on your own in advance of your lab exam, and that you use the exam session to modify your code to fit the specifications for your exam session.** You will have 90 minutes to work on your program and demonstrate them for your TA. This lab is worth **15%** of your final grade with **3/15** for completing the exercises and **12/15** for the lab exam. 50% of the grade for the lab exam will be given for basic functionality and 50% will be given for creative elements.

Hardware and Interface

The hardware used in this lab is the MSP430EXP development board supplied by Texas Instruments (EXP board), which contains a microprocessor, a 3-axis accelerometer (axes noted in figure below), and additional circuitry for USB communications and power management. When you first plug the EXP Board into your USB port, the USB transceiver should automatically install a USB-Serial port and assign a COM port number. (Note: it is normal for some drivers to be installed twice.) If necessary, you can change the COM port number by going into the serial port properties menu. The UART on the microprocessor is configured to operate at 9600 baud, 8 data bits, one stop bit, no parity, and no flow control. Your C# software should be configured to match these parameters.

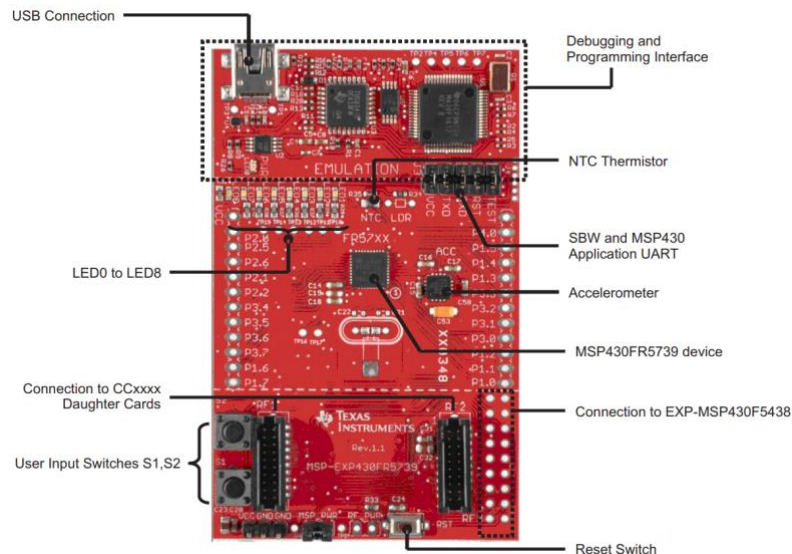


The firmware EXP board is configured to operate in several modes. The mode relevant to Lab 1 can be initiated by transmitting the character "A" to the serial port. In this mode, the microprocessor samples voltage readings from the 3-axis accelerometer and uses an on-board analog-to-digital converter to convert these voltages into an 8-bit digital value between 0 and 255. The digitized acceleration data is transmitted to your PC in 8-bit packets using a serial protocol managed by a Universal Asynchronous Receiver/Transmitter (UART) controller, which also embedded in the microprocessor. The data bits are transmitted at a speed of 9600 bits per second (or baud). The microprocessor has been programmed to output data in the following sequence:

| Start byte | Data byte #1 | Data byte #2 | Data byte #3 |
|------------|----------------|----------------|----------------|
| 255 | X-acceleration | Y-acceleration | Z-acceleration |

A start byte is necessary because the microprocessor will transmit data regardless of whether a PC program is available to respond to it. Therefore, if the microprocessor is powered before the C# program is activated, it will be impossible to distinguish Data byte #1 from Data byte #2. The number 255 has been designated as the start byte. Since each packet can only contain a number from 0 to 255, using 255 as the start byte means that this value cannot be used in the data byte. In fact, any acceleration data with the value of 255 is automatically converted to 254 by the microprocessor.

Exercise 1: Warm up – track mouse position in a PictureBox


1. Set up a form with two Labels, two Textboxes, and one PictureBox controls as shown below. Change the appearance of the controls to make them look nice. Change the picturebox border to FixedSingle.

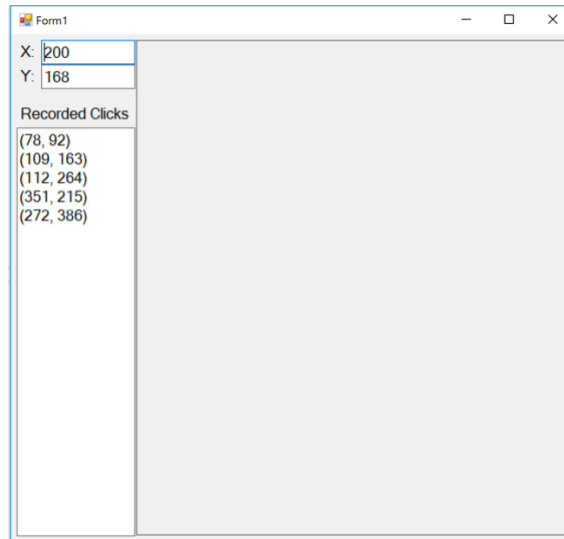

2. Set up the MouseMove event handler on the PictureBox. When MouseMove is called, use the variable e of the MouseEventArgs data type passed into the event handler to acquire the (X,Y) mouse pointer position in the PictureBox and shown them in the appropriate textboxes.
3. Add a Label and a Textbox. Enable multi-line in the Textbox and use it to display “Recorded Clicks”.
4. Set up the MouseClick (Note: not the same as Click) event handler on the PictureBox. When MouseClick is called, acquire the (X,Y) mouse pointer position. Construct a string consisting of the (X,Y) mouse coordinate and an end-of-line character. Add this string to the Textbox using the AppendText method.

Exercise 2: Working with queues

1. Set up a form with buttons, textboxes, and labels as shown below. Give appropriate human-readable names to each.

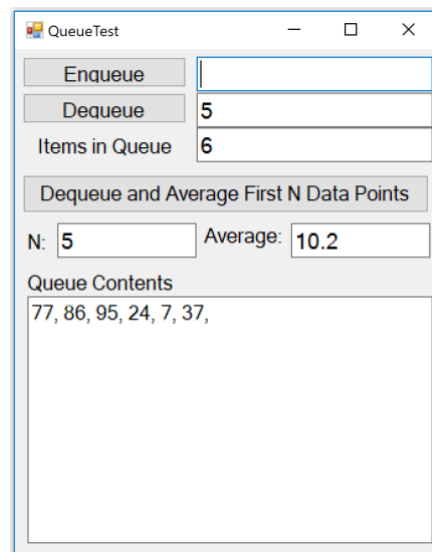

- ### Exercise 3: Switch to ConcurrentQueue

- ```
using System.Collections.Concurrent;
```

- ## Exercise 4: Receive data from the serial port

- [illegible]

2. Add a Serialport object to the form. Configure it as 9600 8N1 (Baud rate = 9600, data bits = 8, flow control = false, stop bits = 1)
3. Plug in the MSP430EXP board to a USB port. A USB serial port should automatically install. Figure out the COM port number for the MSP430EXP.
4. In the FormLoad event handler, configure the Serialport object to the correct COM port.
5. Optionally, acquire the available COM ports and deposit them in a ComboBox using the following code

```
comboBoxCOMPorts.Items.Clear();
comboBoxCOMPorts.Items.AddRange(System.IO.Ports.SerialPort.GetPortNames());
if (comboBoxCOMPorts.Items.Count == 0)
 comboBoxCOMPorts.Text = "No COM ports!";
else
 comboBoxCOMPorts.SelectedIndex = 0;
```

This code can be run during FormLoad or other times when there may be a change in the COM ports. In the ComboBox SelectedIndexChanged event handler, acquire the COM port from the ComboBox and use it to configure the COM port on the Serialport object.

6. Set up a button click event handler to open the serial port (after it is properly configured). Then write the character "A" to the serial port to select the MSP430EXP board to output the accelerometer data.
7. Initialize a string in the form class called serialDataString to temporarily hold incoming serial data.
8. Set up a Serialport DataReceived event handler. In this function, first determine the number of BytesToRead in the serial buffer. Write a while loop to read the bytes, one at a time, from the serial buffer. Convert each byte to a string and append it to the serialDataString with "," and "" characters. This code is being provided below as an example:

```
int newByte = 0;
int bytesToRead;

bytesToRead = serialPort1.BytesToRead;
while (bytesToRead!=0)
{
 newByte = serialPort1.ReadByte();
 serialDataString = serialDataString + newByte.ToString() + ", ";
 bytesToRead = serialPort1.BytesToRead;
}
```

9. Add a timer to the form. Enable the timer in the FormLoad. Set up a TimerTick event handler to show the number of bytes in the serial buffer and transfer data from serialDataString to the Serial Data Stream Textbox using the following code:

```
if (serialPort1.IsOpen)
 textBoxBytesToRead.Text = serialPort1.BytesToRead.ToString();
textBoxTempStringLength.Text = serialDataString.Length.ToString();
textBoxSerialDataStream.AppendText(serialDataString);
serialDataString = "";
```

10. **Checkpoint:** Run your code and show that you are getting the expected data stream. Change the timer interval and show how it changes the length of serialDataString. An interval of 100 should give a serialDataString length of ~220, while an interval of 50 should give a length of ~120.
11. Initialize a ConcurrentQueue of Int32 in the Form class using:

12. In the Serialport DataReceived event handler, store each new data byte in a ConcurrentQueue instead of a string.
13. In the TimerTick event handler, set up a loop to dequeue the data from the ConcurrentQueue one byte at a time. Append each dequeue'ed byte to the Serial Data Stream Textbox. Show the number of items in queue in a Textbox.
14. **Checkpoint:** A timer interval of 100 should give a ConcurrentQueue size of ~30

2. Initialize a new StreamWriter object  

```
StreamWriter outputFile;
```
3. Open a new file for writing by call the StreamWriter constructor with the filename string as parameter  

```
outputFile = new StreamWriter(textBoxFileName.Text);
```
4. If you want to be fancy about it, initiate a SaveFileDialog box to allow the user to choose the location to save the file and enter the filename.
5. Add a recording feature to your program that write the parsed data points to a file using the `outputFile.Write` method. Convert the data values to strings and separate them with a comma. After each set of Ax, Ay, Az, add a time stamp and end-of-line character (`\n`). Check the file to make sure it is correctly formatted and can be imported into Excel.
6. Record accelerometer data for the three gestures in the example lab exam. Record several examples for each gesture. Plot the data in Excel.

## Exercise 7: State machine testing program

1. Make a simple state machine testing program as below

2. The “Process New Data Point” button feeds the current values of  $A_x$ ,  $A_y$ ,  $A_z$  into the state machine
3. After processing, the current state is displayed in a Textbox.
4. Data history records the values of  $A_x$ ,  $A_y$ ,  $A_z$ , and the resulting state.
5. Use this program to test your proposed state machines for gesture recognition.

### Exercise 8: Develop gesture recognition algorithms

1. From your recorded data, identify unique features associated with each gesture.
2. Set up a state machine to recognize those key features.
3. Test the state machine using exercise 7 to make sure it reaches the desired state.
4. Implement your state machine to analyze the real data.
5. Indicate the detected gesture using text and/or graphics output

### Exercise 9: Work on your creative elements

1. Display, analyze, save, and graph accelerometer data in creative ways. Or, develop a piece of interactive software unrelated to the accelerometer. Here are some ideas:
  - a. Make your own version of MS Paint
  - b. Interactive animation (e.g. birthday card or screen saver)
  - c. Snake game or similar obstacle course game
  - d. Hockey goalie game using the accelerometer as the controller
  - e. Glider game using the accelerometer as controller
  - f. Use the accelerometer as a musical instrument
  - g. Integrate accelerometer data to measure velocity or position (difficult!)
  - h. Use the EXP board to air write letters or symbols
  - i. Use the EXP board for a game or interactive contest (e.g. balancing contest)
2. Record a short video (<15s) of your completed project to Canvas. It will be used for grading together with the live demo.



# MECH 368 – Measurement and Instrumentation

## Lab 1: Data Acquisition using Visual C#

### Example Lab Exam

#### Instructions

- You have 90 minutes to complete this lab exam and demonstrate your work for a TA to grade.
- You will work individually without getting any help from anyone else
- This exam is “open computer”. You can use any notes and any code that you wrote previously
- When you are finished, set up a Zoom session with your TA using your phone. Demonstrate the required components of the lab for your TA. For the gesture recognition portion, your hands should only be holding the EXP board and not touching your computer or mouse.

#### Task

You have been asked to develop a hand-held controller for a Street Fighter style game. The player will be using a series of acceleration gestures on the controller to generate punch and kick combinations. Your goal is to detect one of three gestures 5 times in a roll using a total of 6 tries. When a gesture is detected, the program should provide an indication (e.g. textbox, animation, sound etc) that should persist for 1s.

#### Mandatory Elements (50%)

Please write a data acquisition and processing program using C# satisfying the following functional requirements:

| Functional Requirement                                            | Grade     |
|-------------------------------------------------------------------|-----------|
| 1. Display acceleration in X, Y, and Z                            | 3         |
| 2. Display serial buffer size and queue size                      | 1         |
| 3. Display the average of the last 100 data points in X, Y, and Z | 3         |
| 4. Indicate EXP board orientation (X+, X-, Y+, Y-, Z+, Z-)        | 3         |
| 5. Gesture #1 recognized                                          | 5         |
| 6. Gesture #2 recognized                                          | 5         |
| 7. Gesture #3 recognized                                          | 5         |
| <b>Total</b>                                                      | <b>25</b> |

Table 1: Example Table of Gestures

| Gesture         | Acceleration Sequence |
|-----------------|-----------------------|
| 1. Simple punch | +X                    |
| 2. High punch   | +Z, +X                |
| 3. Right-hook   | +X, +Y, +Z            |

#### Creative Elements (50%)

Display, analyze, save, and graph accelerometer data in creative ways. There is no set agenda. You are free to add anything you want. Your TA will assign scores from 1-10 based on functionality, creativity, difficulty, and overall sensibility.